



Toshiba Satellite A75-S226 CD Drive Replacement

Written By: Garrett Gudgel



INTRODUCTION

This a very simple guide to replace or remove the CD-ROM drive from your Toshiba Satellite A75-S226. Remember when repairing the internal components of an electronic device, a dry and clean environment is ideal.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Optical Drive



- Remove the two 5.62 mm screws from the optical drive cover.

Step 2

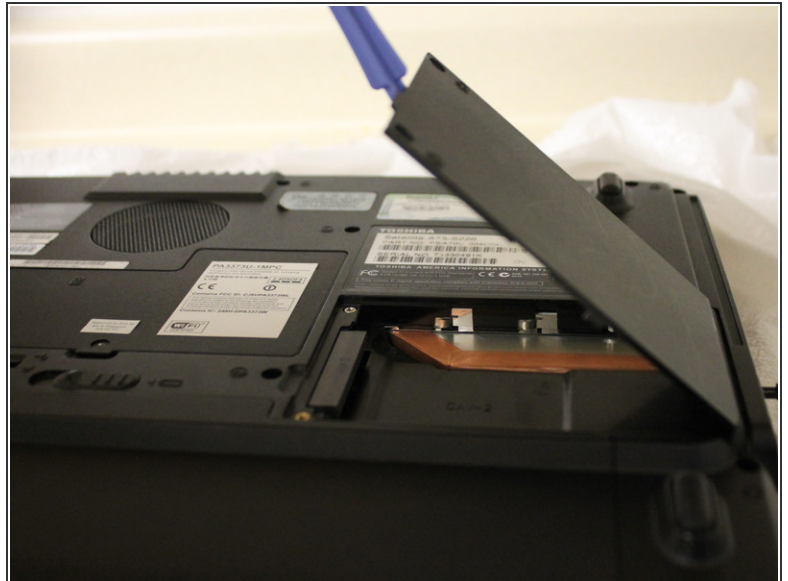

- Remove the optical drive cover.
- Using a plastic opening tool, or your fingernail, can help lift it from its groove.

Step 3




- Using the inset divot, push the optical drive out of the laptop to remove.

Step 4 — CD Drive



- Remove the 8.6 mm screw.

Step 5

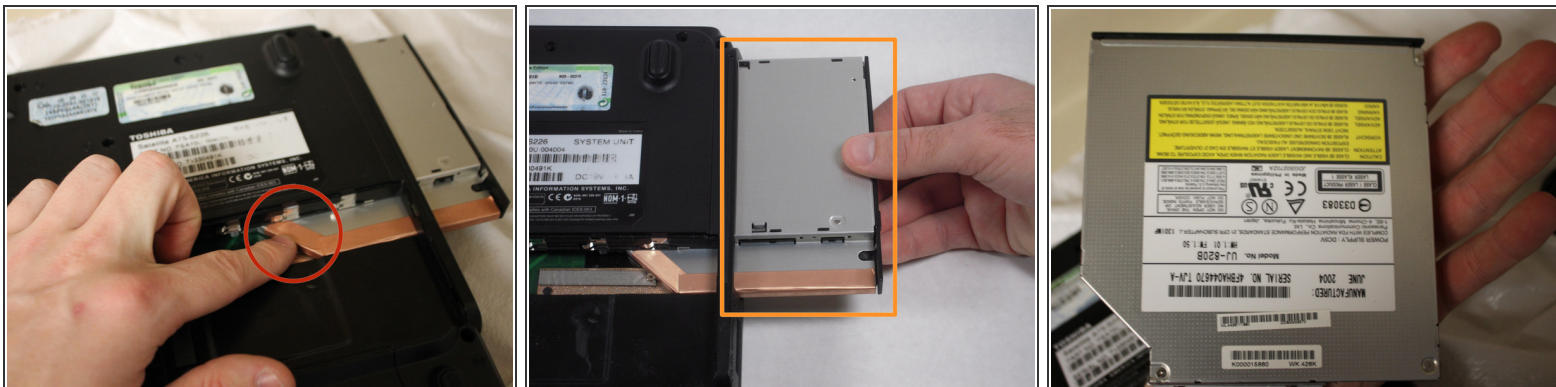

- Push the bottom left corner of the CD Drive until the drive protrudes from the case.
- When a good amount of the CD Drive is showing on the right side, gently pull it out completely.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 08:24:21 PM.